


STICK BOOT PATTERN

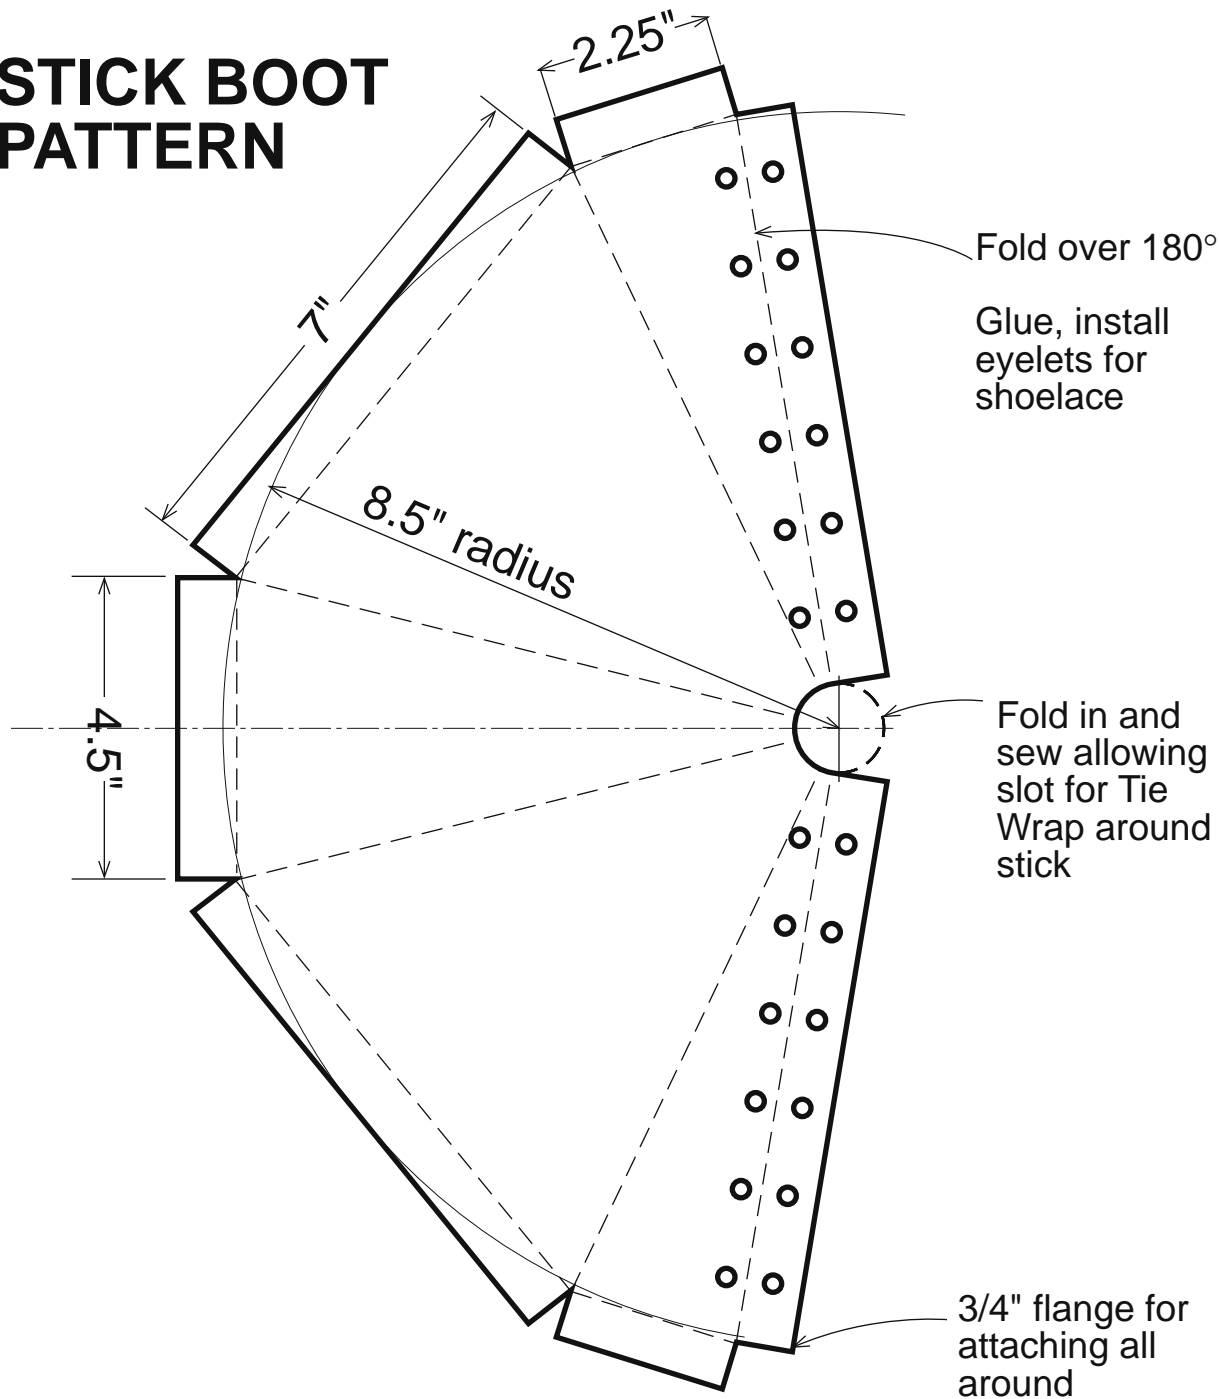

Start by drawing circle 8.5" radius

Construct sections by measuring front section at 4.5" wide then sides at 7" long and add 3/4" flange to outside.

Material is thin leather or naugahyde

Design by Mike Fothergill